



Standard Installation









TOOLS NEEDED:



5/32" & 5/64" Allen Wrench

Waterproof Wire Connectors

Phillips Screwdriver

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- · Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens.
 Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

IMPORTANT LISTINGS AND CERTIFICATIONS

· Suitable for wet locations · Additionally suitable for mounting within 4 ft. of the ground

Please refer to the low voltage design guide at www.bklighting.com/lyguide before installation for proper wire selection.

This set of instructions works for:

PTR-MM-RM

Mini-Micro

PTR-MN-RM


Micro Nite

PTR-RM LED

PTR-RM-LV

Low Voltage

For all remote fixture configurations

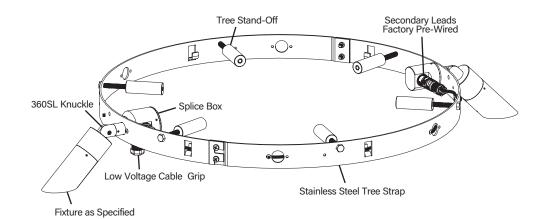

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS



40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com


RELEASE DATE 07/11/2023

REFERENCE NUMBER INS-2802-00




Standard Installation


Fixture Installation

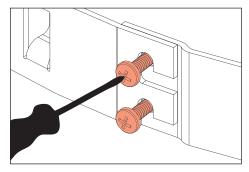


 Locate side of strap without factory pre-wired cable. To open strap, use Phillips screwdriver to back out strap screws. Strap hooks over two (2) phillips screws on strap.

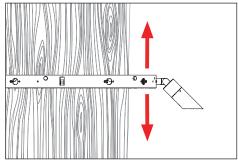


Place tree ring fixture around tree. Move fixture to desired height. Tighten the entire assembly to the tree with provided stand-offs.

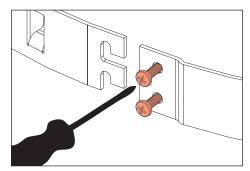


 Secure by hooking end of strap over two (2) phillips screws. Secure by tightening two (2) phillips screws with phillips screwdriver.

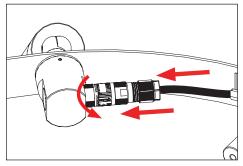

Connect secondary cable then twist to secure in place.

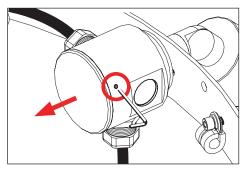


6. Open main splice box by loosening three (3) #8-32 set screws using a 5/64" allen wrench. Main splice box has cord grip on bottom of splice box.

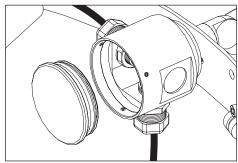


5. Bring low voltage cable from remote transformer secondary side to main splice box location. Loosen cord grip on bottom of splice box, feed low voltage cable from remote transformer through, then tighten cord grip to secure.

1 Leave enough lead length for future service.

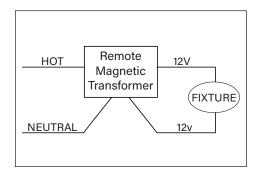

WIRING DIAGRAM

- Make watertight connections from remote transformer secondary side to fixture leads with waterproof outdoor wire connectors (not included). See wiring diagram.
- LED For use with 12VAC LED remote transformer or magnetic transformers only. B-K Lighting cannot guarantee performance with third party manufacturers' transformers.

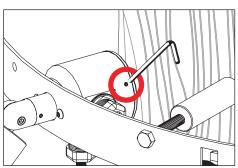

 Close main splice box with three (3) #8-32 set screws using a 5/64" allen wrench. Secondary side of fixture and additional fixtures are factory pre-wired. Adjust fixture aiming as required.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS











Standard Installation

360SL Knuckle

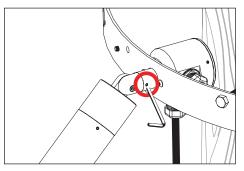

- Use a 5/64" allen wrench to slightly loosen two (2) #8-32 stainless steel set screws on the stem for 360° aiming purpose, then tighten screws.
- Marning: Do not over tighten set screw. Doing so will compromise o-ring seal and will void warranty.

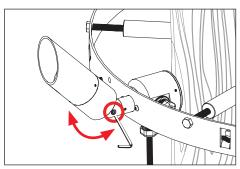

 Use a 5/32" allen wrench to loosen #10-32 stainless steel black oxide socket head cap screw at the knuckle for vertical aiming purpose, then tighten screws.






Replacement Instructions



This product is available with Adjust-e-Lume® (Patent Pend.) for Dynamic Lumen Output Control Warning! The light output of this product may be dynamically adjusted as desired to raise and lower light levels. Please ensure the fixture is set to the appropriate light level desired during installation.


Replacing LED Board/Driver and Optics

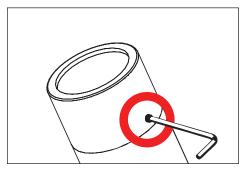


Use a 5/64" allen wrench to loosen #8-32 stainless set screw and remove cap.




Space three fingers evenly around the optic and gently rock optic to remove.

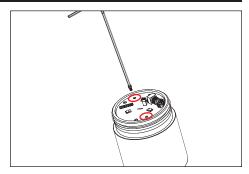


Use a 5/64" allen wrench to remove two (2) #2-56 socket head cap screws on LED board, grasp LED board and gently pull up to expose quick disconnect.

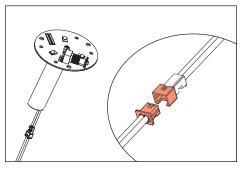


Disengage LED board and driver assembly. Replace 5. Reverse install LED board and driver. with new board and driver assembly.

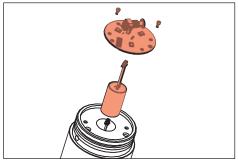

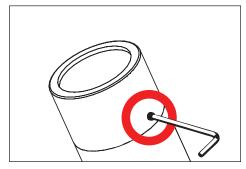


With flat head screw driver rotate dial to desired lumen output. Replace cap.

Lamp Installation or Relamping if Required for Low Voltage LED Lamps

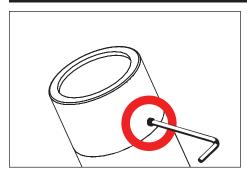


Use a 5/64" allen wrench to loosen #8-32 stainless set screw and remove cap

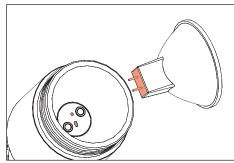

2. Firmly insert lamp pins into socket to make connection. Rocking motion may be required.

 $\ \ \, \underline{ \ \ }$ Do not exceed the maximum wattage listed on the fixture label before installing.

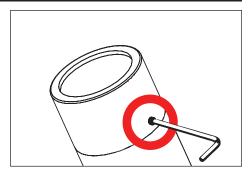

Place cap on fixture and tighten set screw. Tighten screw to 1/2 in-lbs. Top of screw should sit flush with fixture cap.

Marning: Do not over tighten set screw. Doing so will compromise o-ring seal and will void warranty.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS








Replacement Instructions


Replacing LED Board/Driver and Optics

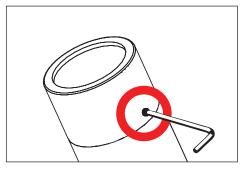


1. Use a 5/64" allen wrench to loosen #8-32 stainless set screw and remove cap.




Space three fingers evenly around the optic and 3. gently rock optic to remove.

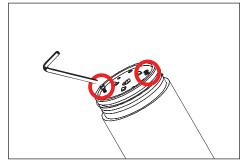


Use a 5/64" allen wrench to remove two (2) #2-56 socket head cap screws on LED board, grasp LED board and gently pull up to expose quick disconnect.

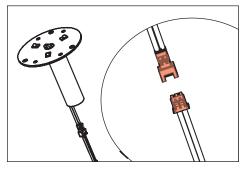

4. Disengage LED board and driver assembly. Replace with new board and driver assembly.

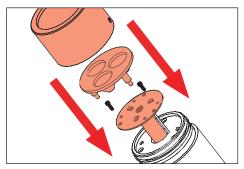

 Reverse install LED board and driver by carefully wrapping 18 gauge wires around driver and inserting into fixture body. Secure LED board in place with stainless steel screws.

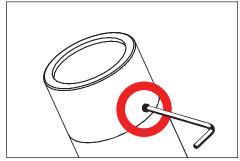

 Place cap on fixture and tighten set screw. Tighten screw to 1/2 in-lbs. Top of screw should sit flush with fixture cap.

Warning: Do not over tighten set screw. Doing so will compromise o-ring seal and will void warranty. Cap should be able to rotate without force



LED BOARD/DRIVER/OPTICS

1" Body Size



Standard Installation/Replacement









Hot Surface





.050" & 9/64" Allen Wrench Small Flat Head Screw Driver

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.


SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS


- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes
- · Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens.
 Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

IMPORTANT LISTINGS AND CERTIFICATIONS


Re-placing LED Board/Driver and Optics

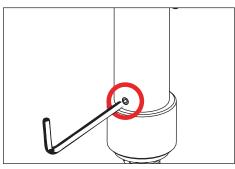


1. Use a 5/64" allen wrench to loosen #8-32 stainless steel set screw and remove cap.

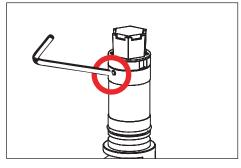


Use a .050" allen wrench to loosen two (2) #4-40 stainless steel set screws below LED board on the heat sink. Gently pull up on LED board and Driver assembly to expose quick disconnect.

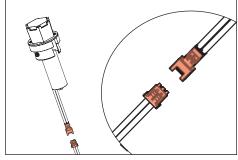

Disengage LED board and driver assembly. Replace with new board and driver assembly.

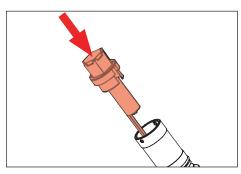

 Reverse install LED board and driver by carefully wrapping 18 gauge wires around driver and inserting into fixture body. Secure LED board in place with two (2) #4-40 stainless steel set screws.

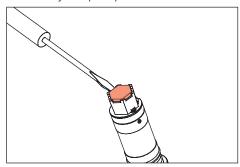

Use small flat head screw driver to remove lens from optic holder on the LED. Snap new optic in place. Replace cap on fixture and tighten set screw.

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS

